



OIL DRIP PAN

If you have any comments, suggestions or questions, please send an email to: info@sawgrip.com

THANK YOU for purchasing SawGrip

You will enjoy the advantages of owning the SawGrip Oil Drip Pan for your SawGrip chainsaw carrier.

INSTALLATION:

Remove lower 2 nuts from bar clamp. Install drip pan as shown in diagram below. Replace the lower two nuts and set resistance.

SET RESISTANCE:

Open bar clamp up so chainsaw bar will go between the rubber pads. Tighten bottom lock nuts leaving about 1/8" gap then tighten top T-Handle about the same. Pull on saw. If saw moves easily, tighten bottom and top adjusting nuts and T-Handle until saw has enough resistance to slide out with minimal effort. Once the resistance is set correctly, you will be able to put the saw in or out without always adjusting the lower nuts. To lock saw in place, tighten only the top T-Handle until the saw can't be pulled out. It is recommended to remove saw from The SawGrip before transporting your ATV. **Total chainsaw length must not exceed the width of the ATV.**

DRIP PAN INSTRUCTIONS

IMPORTANT

SAWGRIP CARRIER HAS TO SET FLUSH WITH FRONT RAIL OR AHEAD OF RAIL OR PAN WILL NOT WORK

